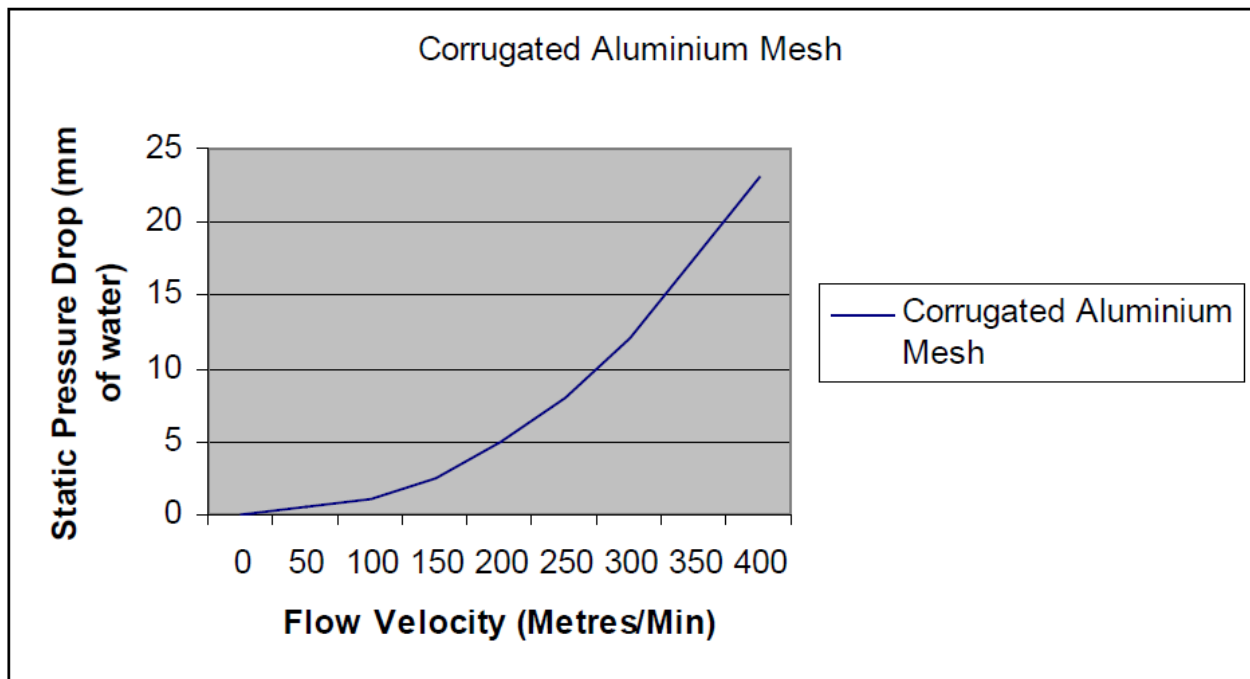


Triple Mesh Dust Filter – VH-08**VF Series**

The VH-08 dust filter assemblies are constructed from three layers of corrugated aluminium mesh held in a 'C' section aluminium extruded frame. Please see the standard profiles available in our catalogue or on our website.

For the protection of the mesh an expanded aluminium kick plate is available within the frame.

It is recommended that these units are used in conjunction with fan assisted forced air ventilation.

**Shielding Effectiveness**

(based on a 250mm² test section)

Frequency	Attenuation dB	Field
10KHz	42	H
100KHz	53	H
1MHz	61	H
1 MHz	92	E
10MHz	81	E
100MHz	60	E
1GHz	52	P
10GHz	43	P

